



ATTENTION

- Don't use the osmosis if the filter alarm is displayed
- Replace the cartridge when the filter alarm is displayed
- Make sure the cartridge is undamaged before installing it: when agitated, no movements should be heard inside
- Damaged cartridges must not be installed to avoid causing irreversible osmosis damage
- Contact your support centre to purchase replacement cartridges

Pre-filter cartridge replacement



- 1- Unplug the osmosis
- 2- Close the feeding tap
- 3- Rotate the cartridge to the right and pull it down



**Remember to reset the
filter alarm**

- 1- Insert the new cartridge and screw it tight by rotating it to the left
- 2- Open the feeding tap and replug the osmosis
- 3- **Reset the filter alarm**

How to reset the filter alarm

- 1- Push the arrow button  until the “**LANGUAGE**” window appears
- 2- Push the arrow button  to scroll through the menu
- 3- When you reach the window

**Filter alarm
RESET LIT: NO**

Push “+” to select “YES”:

**Filter alarm
RESET LIT: YES**

- 4- Push  to save the value
- 5- Push  to exit the menu